

- 1. If the ELD (**A**) is already installed in the vehicle, disconnect the ELD Connection Cable (**B**) from the Y-Adapter (**C**).
- 2. Locate a +12V source of battery power in the cab (fuse block, power block, etc).
- Connect the RED wire from the Switched Power Adapter (D) to the +12V battery source.
- Insert the Switched Power Adapter (D) between the ELD Connection Cable (B) and the Y-Adapter (C), confirming a good connection to both.
- 5. Verify that the **GREEN** light on the front of the ELD continues to blink when the vehicle igniton is in both the "on" and "off" positions.
- 6. Secure all excess cable with wire ties to ensure safe vehicle operation.

